


# **HANNECARD thanks you for purchasing the countroll® NIP**

**To get started,  
scan the QR code below  
to access the user manual  
or check the quick start manual  
at the back**

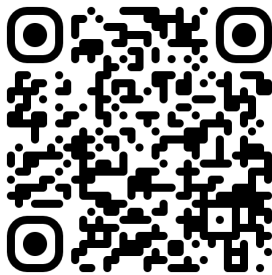

# NIP QUICK START MANUAL

## How to install the app?

- Download the countroll® app from the Google Play Store or the Apple App Store (scan the QR code to get access to the app)



Google Play Store



Apple App Store

- If you already have a countroll® account, login with your username and password. If you don't have a countroll® account, register and log in.

## How to perform a NIP measurement?

### Step 1: Connecting your devices with the app

- Open the countroll® app
- Click on *countroll® NIP*
- Click on *connect countroll® NIP device*
- Switch on the device by pressing the silver button, a blue LED will start flashing
- Click on the serial number that will appear on the app
- Once the connection is established, it will be shown on the app as 0.0 The color matches the LED of the device
- Repeat the blue steps to add more NIP devices

### Step 2: Measuring the NIP

- a) For 2-point measurement: insert one strip left and one strip right in between the rollers
- b) For 3-point measurement: insert one strip left, one strip right and one in the middle in between the rollers  
Tip: strips can be held in place by taping them on the roller
- The NIP measurements will appear on the app
- When modifying the pressure between the rollers, the NIP measurements on the app are adapted automatically